



Cotton Candy Machine:

Please read and carefully follow the operating instructions for the Cotton Candy machine before use. Additionally, please read the instructions on the machine for safety measures. TO AVOID POWER SHORTAGE, DO NOT plug in other appliances to the outlet while using the machine and check to make sure enough electricity is available to power the machine.

1. Place the cotton candy machine on an even surface and plug in the power cord to an outlet
2. Unscrew the (2) metal screws with rods on either side of the machine and drop down the rods and then place white plastic container over the rubber head.
3. Pour floss sugar into the rubber head a little more than halfway full. DO NOT OVERFILL. Break up the lumps in the sugar before pouring.
4. The HEAT knob should be turned $\frac{3}{4}$ of the way to the right. TURN ON the HEAT switch and wait approx 1 minute then TURN ON the MOTOR switch.
5. Once you see the sugar threads spin out, create cotton candy by collecting the sugar threads with the paper stick.
6. Turn off BOTH SWITCHES when not making cotton candies and when pouring more floss sugar into the rubber head.
7. After use, unplug machine and let cool. Take wet paper towel and remove as much cotton candy as possible from white container. DO NOT TURN cotton candy machine upside down. **DO NOT POUR WATER** into machine. Leave remaining floss sugar in cotton candy.
8. Do not throw away plastic net and pins attached to container as these are part of the machine.

Enjoy!